

Wiring Harness Installation Instructions for 20 Baby Storage Cart

Purpose


Provide direction on replacing the obsolete orange 5 Baby Charger pod in the 20 Baby Storage Cart with the new 5 Baby Charger Wiring Harness.

Prerequisites


- One 20 Baby storage cart
- Replacement wiring harness (sku 10246378)

Steps to Perform

1. Open the cart and pull out the drawer that has bad cables.
2. Look at the back of the drawer and you will see an orange charging pod.
3. Disconnect any functioning charging cables and keep them as spares in case a cord in another drawer fails.
4. Discard any non-functioning charging cables.
5. Unplug the power supply from the orange pod.
6. Remove the pod from the cart. It's attached to the back of the drawer with Velcro and can be pulled off.

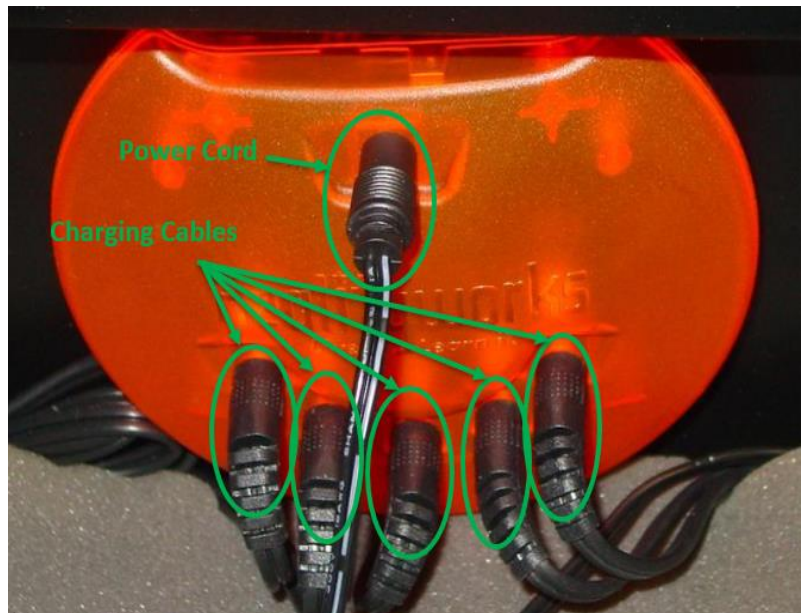

7. Take the new wiring harness and plug the red connector to the power cord in the back of the drawer.

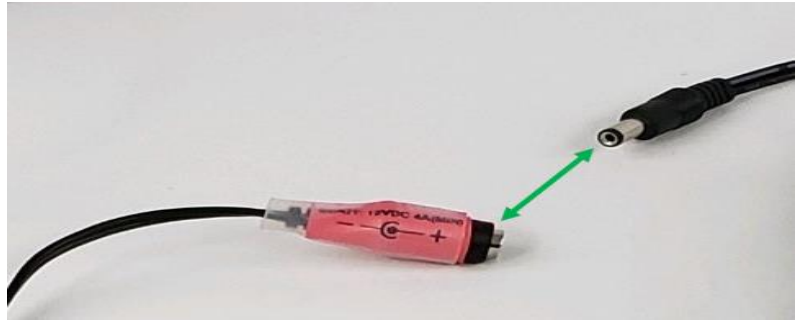

8. Stretch out the charging cables in the drawer and plug in the Babies.

For additional assistance and video tutorials visit our website:

<https://www.realityworks.com/knowledge-base/>