

How Do I Demo Baby?

Purpose


How to run a Baby demonstration on the Control Center. Demonstration care sessions run the same way care sessions run during an actual simulation. This allows students a chance to become familiar with how to care for Baby, before taking Baby home.

Prerequisites

- The Baby must be within 20 feet of the Communication Adapter
- Baby MUST be unplugged from the charger
- The red light on the back of the Baby must be solid or flashing
- The Control Center must be open, and make sure the Communication Adapter icon at the bottom right corner is green 
- The Baby needs to have a green wireless indicator under “Comm” 
- Have the ID, bottle, and yellow and green diapers

Steps to Perform


1. In Available Baby window, select Baby and click Demo.

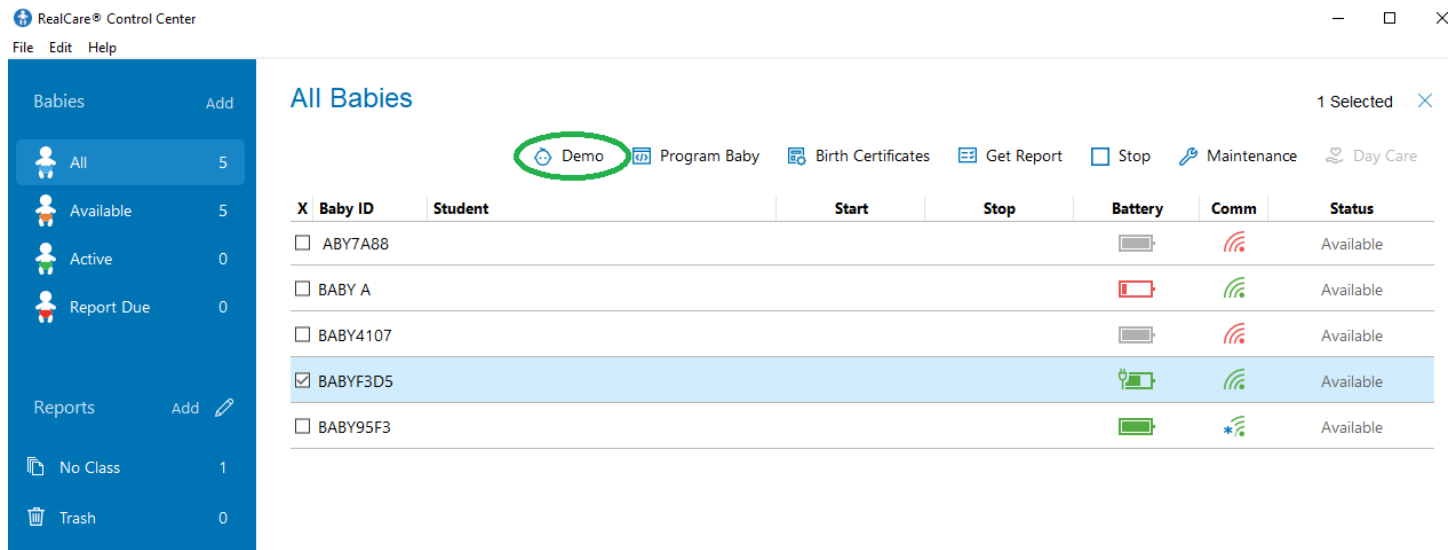

X	Baby ID	Student	Start	Stop	Battery	Comm	Status
☐	ABY7A88						Available
☐	BABY A						Available
☐	BABY4107						Available
☒	BABYF3D5						Available
☐	BABY95F3						Available

- Baby will accept any working ID in Demo, it doesn't have to be an ID that is configured to Baby.
- Just like in a simulation the Baby must be ID'd to begin each care session. If multiple care sessions are selected, Baby must be ID'd each time it cries for care.

2. In Demo window, select a Demonstration Mode desired and click “Start Demo”

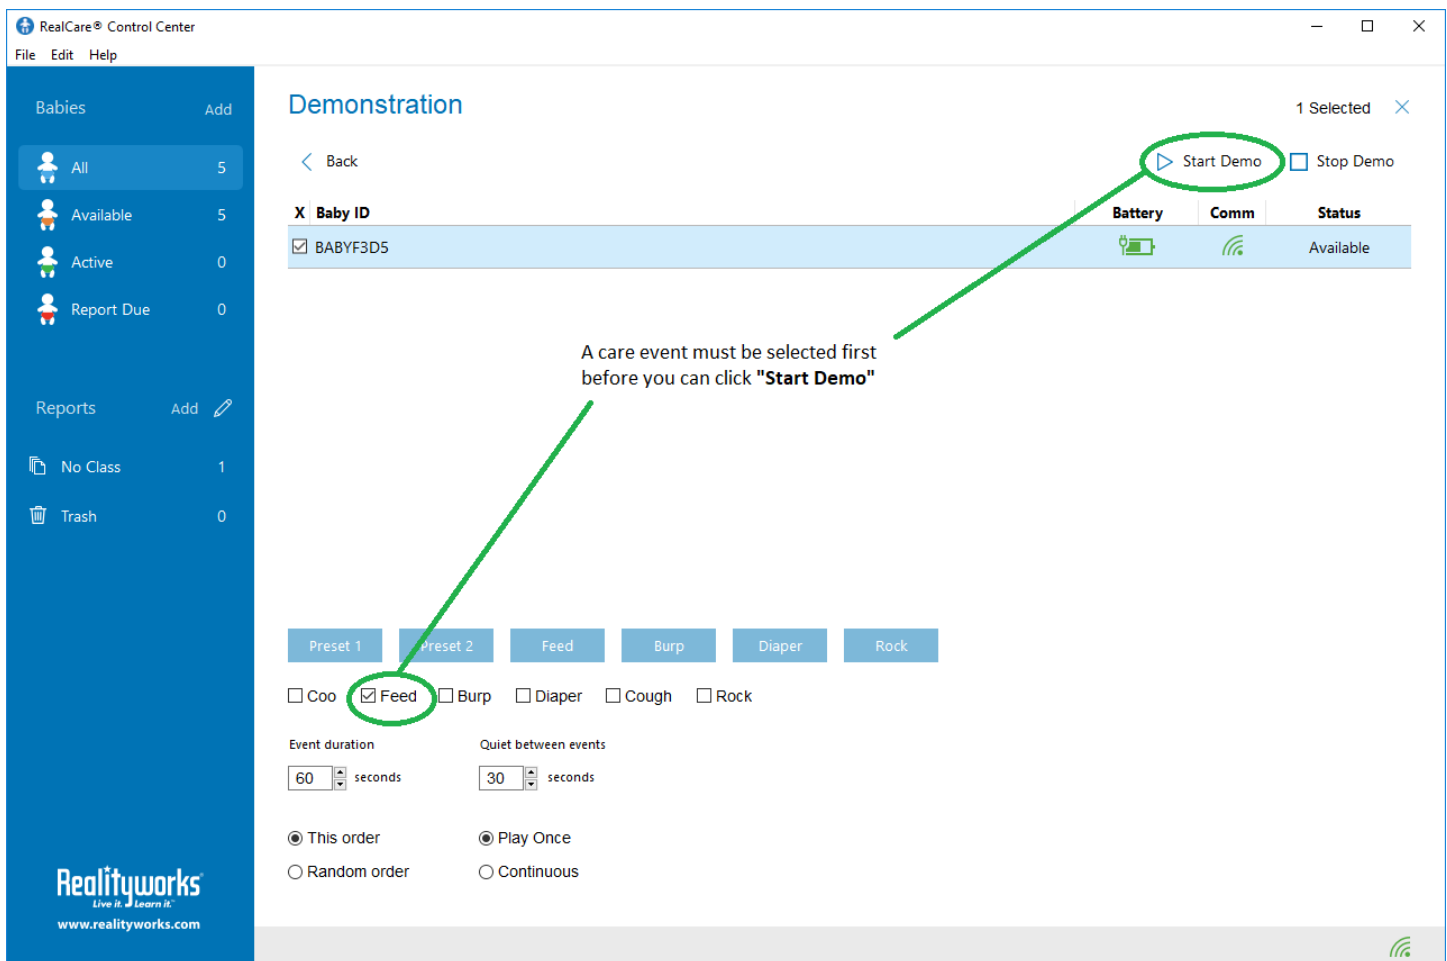

- For example, if Preset 1 is selected, the preselected settings are:
 - Baby will Chime to indicate Demo has started.
 - Baby will COO. No action is needed.
 - 30 seconds later it will require a Feeding Care Session that will last 60 seconds. When Baby begins crying, ID the Baby and begin feeding care session. If successfully completed, Baby will COO.
 - 30 seconds later it will require a Burp Care Session that will last 60 seconds. When Baby begins crying, ID the Baby and begin burp care session. If successfully completed, Baby will burp. The burp is at the volume an infant would burp and is not very loud. It will be important for students to recognize the sound.
 - 30 seconds later it will require a Diaper Change Care Session that lasts as long as it takes to change the diaper. When Baby begins crying, ID the Baby and begin diaper care session. If successfully completed, Baby will COO.

- 30 seconds later Baby will make a COUGH sound. No action is needed.
- 30 seconds later Baby will require a Rock Care Session that will last 60 seconds. When Baby begins crying, ID the Baby and begin rocking care session. If successfully completed, Baby will COO.
- The COO indicates Preset 1 Demonstration has ended. Baby is ready for the next Demonstration.

You can edit these settings if you'd like to run a Custom Demonstration

To set up a Custom Demonstration, click the desired events boxes, set an Event duration time, Quiet between events time, select This Order or Random Order, and select Play Once or Continuous.

1. Click Start Demo button. Baby will CHIME and begin Demo.
2. When Baby begins to cry, ID Baby before beginning care session.
If multiple care sessions are set, Baby will need to be ID'd before each care session.

For additional assistance and video tutorials visit our website:

www.realityworks.com/support/